

# HUSH PRODUCT MAINTENANCE

## 1 GLASS

Clean weekly with a moist cloth, using circular movements. If a cleaning agent is used, first apply it to a cloth, and then clean the surface.

## 2 UPHOLSTERY

Brush the fabric weekly with a soft natural bristle brush or use a vacuum cleaner with an upholstery brush cap. Avoid excessive rubbing that may damage the fibers.

Solid dirt should be removed carefully with a flat, blunt object such as a spoon or palette knife.


More persistent stains must be removed with a neutral cleaning agent. The upholstery fabric should not be soaked. Before cleaning, check in an unobtrusive area how the surface reacts to the cleaning agent, and comply with the manufacturer's recommendations.

Upholstery cleaning agents must not contain paraffin, alcohol or other solvents. (apart from the SILVERTEX panels, which allows the use of diluted bleach). Do not use chlorine-based agents on Nano coated furniture.

**For Performance Vinyl** light cleaning use a solution of 10% household liquid dish soap in warm water, applied with a soft damp cloth. Rinse with clean water and dry. For heavy stains use 10% bleach and 90% water, rinse to remove bleach.

## 3 SHELVES

Every day, clean the entire surface with a microfiber cloth with a cleaning agent or water. Leave the surface to dry. Do not apply the cleaning agent directly to the surfaces. Do not use abrasive, glazing or coarse cleaning agents. Microfiber cloths are lint-free and prevent streaking.

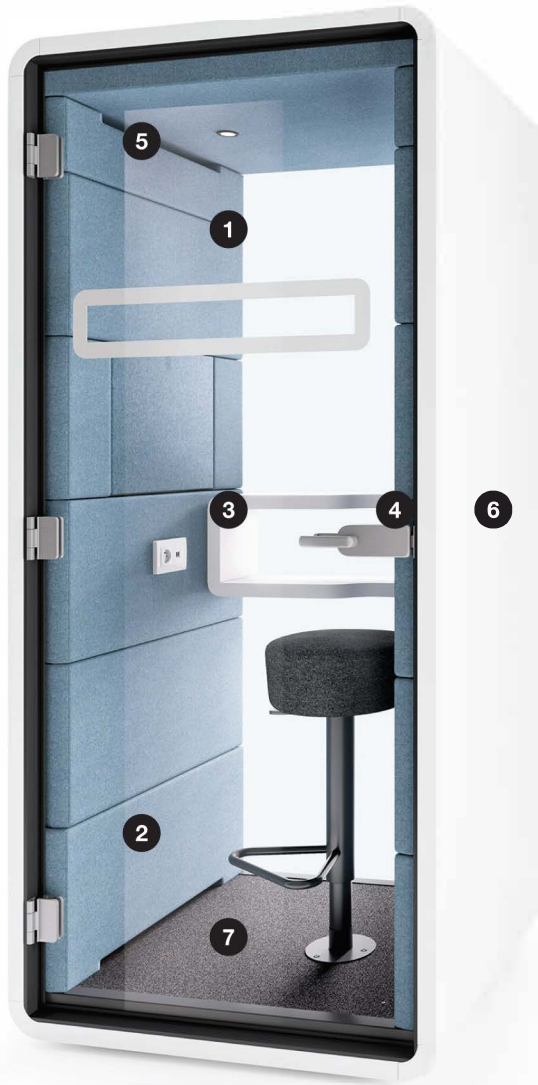

## NOTE

Before the Hush pod is used, it is recommended that all handles and table surfaces should be cleaned. Special wipes can be used for this. If a cleaning agent is used, leave it on the surface for a few seconds, then wipe dry.

## 4 HANDLES

Every day, clean all the handles inside and outside the Hush pod with a moistened microfiber cloth. After cleaning, wipe the surface dry.

## 5 VENTILATION SYSTEM

Once every 6 months, clean the fan with a soft vacuum-cleaner attachment.

Do not insert the vacuum-cleaner tube between the fan blades.

Before cleaning, disconnect the Hush pod from the power supply.

## 6 EXTERIOR

Once every 6 months, clean all the surfaces, top-down, with a moistened microfibre cloth.

## 7 FLOOR

Once a week, vacuum the entire floor.

More persistent stains must be removed with a neutral cleaning agent (If a cleaning agent is used, first apply it to a cloth or paper towel, and then clean the surface).

**Before cleaning, check in an unobtrusive area how the surface reacts to the cleaning agent.**



- Use the upholstered furniture as intended.
- Protect the furniture from weather and direct sunlight.
- Avoid strong spot tension in upholstered furniture; otherwise the fabric may tear, split or rip.
- Hush booths should be cleaned on a regular basis to prevent the prolonged accumulation and retention of dirt, dust and/or other deposits.
- Light upholstery fabrics should not encounter dyed fabrics to avoid the risk of permanent discoloration. An upholstery of intense color may dye in the initial phase of use.

